


ADA Requirements for Installation of Interior Signs

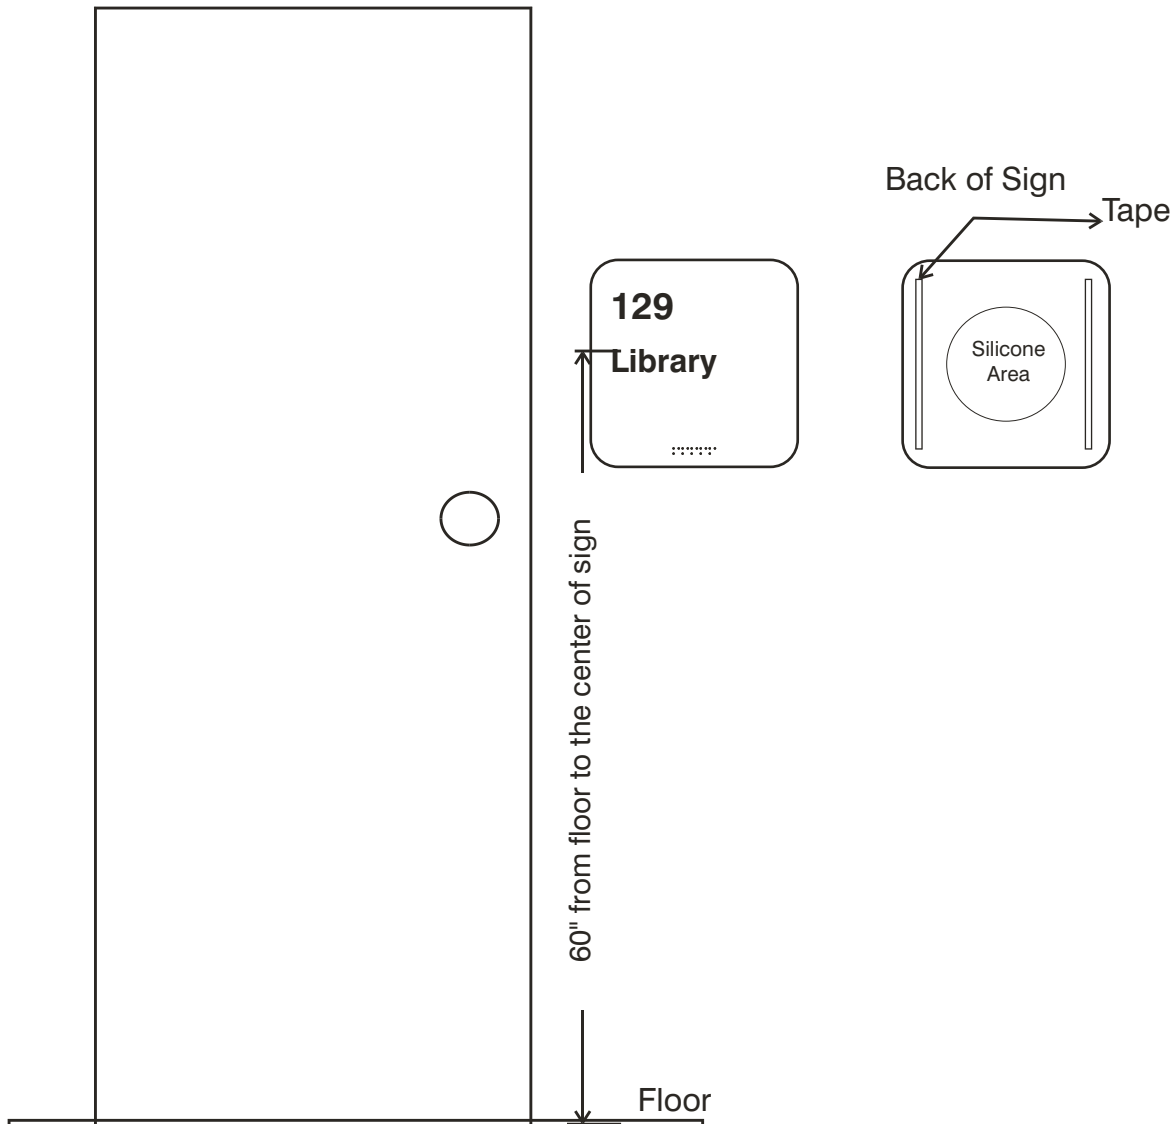

- Sign must be placed on same side as door handle
- Sign is to be mounted 60" from the floor to the center of the sign
- **Silicone** should be applied to the back of sign
- Tape is to hold the sign in place while silicone is drying
- **Silicone must be used** or signs will start falling off the walls